



**CPU Holder**

By MultiTable, LLC


2255 W Desert Cove Ave Suite E  
Phoenix, AZ 85029

602.773.6911  
customerservice@multitable.com

**www.MultiTable.com**



**CPU Holder  
ASSEMBLY INSTRUCTIONS**

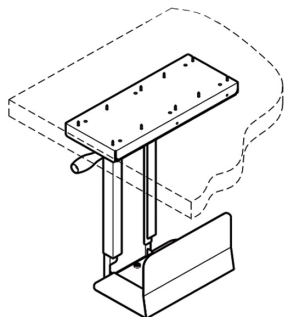

Before assembly, please verify contents.  
Carefully remove contents from packaging.  
Check the contents for transit damage.  
Ensure all parts are in the box.  
In case of any damage or missing/incorrect  
parts, contact customer service at  
602.773.6911 or customerservice@multitable.com.


**Do not attempt to assemble the CPU Holder if  
there is any damage or are any missing/incorrect  
parts.**

### PARTS CHECKLIST

CODE	COMPONENT	QTY
01	Top Bracket	1
02	Bottom Bracket	1
03	Holder	1
04	Slider	1
05	Slide Support	1
06	Handle	1

### FITTINGS CHECKLIST

CODE	COMPONENT	QTY
07	Screw	10
08	Screw	10
09	Spacer	1
10	Washer	1
11	Knob	1
12	Thick Pad	2
13	Round Foam Pad	1 set
14	Foam Pad	4

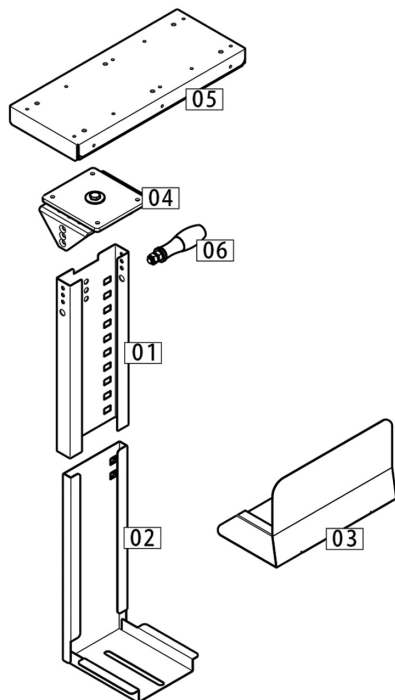

### TOOLS CHECKLIST

Allen Wrench



### **CAUTION:**

The CPU Holder and its components are low maintenance items, but still require regular maintenance. We recommend checking and tightening the screws every 6 months. Should your CPU Holder require repairs, please contact us. Any repairs or alterations should only be completed using approved replacement parts from MultiTable.

