

Wheel Kit Assembly Instructions

Assembly Manual Table of Contents

NERAL INFORMATION	
Intended Use	
X CONTENTS	4
PORTANT: READ ALL BEFORE ASSEMBLY	5
Verify Package Contents	5
IMPORTANT! Assembly Information	
SEMBLY OF THE WHEEL KIT	6
3.2 Large (29" x57") Table Tops	
STOMER SERVICE	9
	Intended Use Base Width Requirements Warranty Tools Required for Assembly Safety Information X CONTENTS PORTANT: READ ALL BEFORE ASSEMBLY Verify Package Contents IMPORTANT! Assembly Information SEMBLY OF THE WHEEL KIT Attaching the Stability Bar Attaching the Wheels Completing the Table Top Assembly 1 Small (24" x 40") Table Tops 1 Medium (24" x 48") Table Tops 2 Large (29" x57") Table Tops

1.0 GENERAL INFORMATION

1.1 Intended Use

Thank you for choosing MultiTable's Wheel Kit! We hope you enjoy your new purchase! Your safety is important to us. Please follow these assembly instructions carefully and thoroughly. Only use your Wheel Kit indoors with a ModTable or Mod-E Base. The Wheel Kit should only be used for its intended purpose. Varying from these instructions negates your warranty. MultiTable cannot be held liable for any injury or damage from improper use.

1.2 Base Width Requirements (using ModTable or Mod-E Base Center Crossbar with Measurements)

• Below are the minimum and maximum table top dimensions allowed for use with the Wheel Kit:

1.0 Width Setting:

Use with a MultiTable Small Table Top (24" x 40")

Minimum Table Top Dimensions: W 24" x L 40"

Maximum Table Top Dimensions: W 30" x L 43"

1.1 Width Setting:

Use with a MultiTable Medium Table Top (24" x 48") or Large Table Top (29" x 57")

Minimum Table Top Dimensions: W 24" x L 44"

Maximum Table Top Dimensions: W 30" x L 60"

1.2, 1.3, & 1.4 Width Setting:

Not compatible with Wheel Kit

Refer to the ModTable or Mod-E Assembly Manual to change width settings as needed.

1.3 Warranty

All MultiTable Wheel Kits come with a two year limited warranty.

1.4 Tools Required for Assembly

- Small Wrench (Not supplied)
- Drill (Not supplied) A drill may be necessary if using the Large (29" x 57") Table Top.
- Allen Wrench (Supplied with ModTable or Mod-E Base purchase)

1.5 Safety Information


- The MultiTable Extra Large Table Top (29" x 72") or table tops larger than 30" x 60" are not compatible with the Wheel Kit.
- Before relocating your ModTable or Mod-E Base with a Wheel Kit, ensure that the base has been
 adjusted to its lowest position. Once the base has been completely lowered, you are now free to
 move your base around as needed.
- The Stability Bar is a required component of the Wheel Kit.
- Any changes or modifications to the Wheel Kit, not expressly approved by the manufacturer, may void the user warranty.

IMPORTANT!

- Stop using the Wheel Kit at once if you notice anything unusual.
- Contact MultiTable Customer Service at 602.773.6911, or customerservice@multitable.com

2.0 BOX CONTENTS

#	Description	Qty
01	Stability Bar	1
02	Long Black Bolts	8
03	Locking Wheels	2
04	Non-Locking Wheels	2

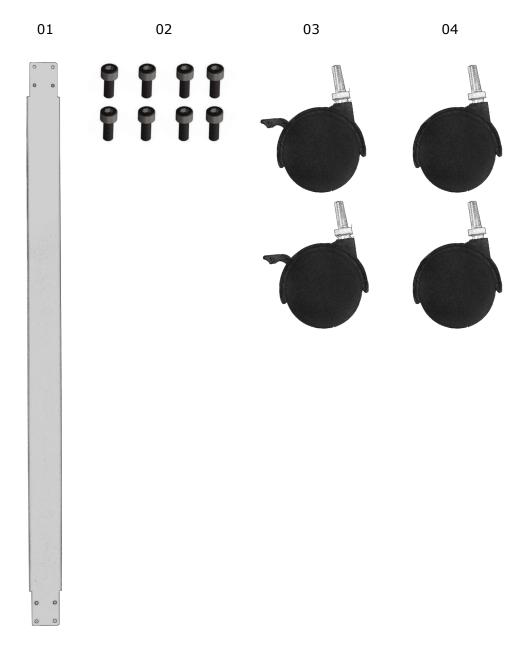

3.0 IMPORTANT— READ ALL BEFORE ASSEMBLING




Before assembly, read all safety information in section 1.5.

3.1 Verify Package Contents

- Gently remove contents from packaging.
- Ensure all parts are in the box.
- Check the contents for transit damage.
- In case of any damage or missing/incorrect parts, contact customer service at 602.773.6911 or at customerservice@multitable.com.
- Do not attempt to assemble the Wheel Kit if there is any damage or any missing/incorrect parts.

3.2 IMPORTANT! Assembly Information

- Your Wheel Kit must be installed after the ModTable or Mod-E Base has been completely assembled.
- Only assemble the Wheel Kit with the tools required as listed in section 1.5.
- The legs of your ModTable or Mod-E Base MUST be at the lowest position at all times during assembly.
- Do not put the bolts in slanted as this will damage the screw and/or nut, and may result in failure to properly attach the Wheel Kit to the base.

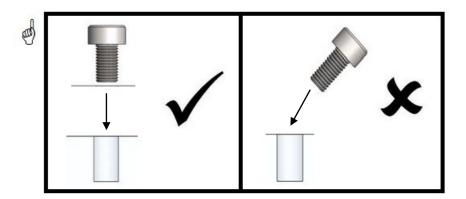

IMPORTANT!

 All bolts MUST BE FULLY TIGHTENED. In each section of the Assembly Manual, after initially tightening each bolt, you will need to go back and double check the bolts to ensure they are fully tightened.

4.0 ASSEMBLY OF THE WHEEL KIT

#	Description	Qty
01	Stability Bar	1
02	Long Black Bolts	8

4.1 Attaching the Stability Bar

- Ensure base is set to correct width setting. Refer to base Width Requirements in section 1.2.
- Remove the base **handle** (if applicable).
- With the assistance of another person, flip the base upside-down, so that the base is resting on the **top supports** and **center crossbars**.
- Remove both **feet** from the **legs** of the Base. You may discard the eight bolts or save them for future use should you decided to remove the Wheel Kit.
- Place the **Stability Bar** across both **legs**, with U-shape facing up towards you.
- Place feet back onto both legs, with Stability Bar in between the base leg and feet.
- Attach the Stability Bar and feet to both legs with the Long Black Bolts.



4.2 Attaching the Wheels

#	Description	Qty
03	Locking Wheels	2
04	Non-Locking Wheels	2

- Unscrew the **foot adjusters** from both **feet**. You may discard the foot adjusters or save them for future use.
- Attach the **Locking Wheels** to the front of the **feet**, tightening with a small wrench.
- Attach the **Non-Locking Wheels** to the back of the **feet**, tightening with a small wrench.



4.3 Completing the Table Top Assembly

4.3.1 Small (24" x 40") and Medium (24" x 48") Table

- For the ModTable Base, return to the ModTable Assembly Manual, **section 3.4.9**, and complete the remaining sections.
- For the Mod-E Base, return to the Mod-E Assembly Manual, **section 4.3.5**, and complete the remaining sections.

4.3.2 Large (29" x 57") Table Tops:

- When using a Wheel Kit with a Large (29" x 57") Table Top, the existing pre-drilled holes cannot be used. New holes will need to be made to fit the 1.1 base width setting. You can achieve this by using a drill, or by using a screw driver and the self-tapping wood screws.
- With the assistance of another person, turn table top upside down on a soft surface, and carefully place the base over it (upside down), setting it on top of the table top.
- Center the base over the table top and mark where the new holes need to be made.
- Once the pre-drilled holes have been marked/made, please proceed to the following:
 - ♦ For the ModTable Base, return to the ModTable Assembly Manual, **section 3.4.9**, and complete the remaining sections.
 - ♦ For the Mod-E Base, return to the Mod-E Assembly Manual, **section 4.3.5**, and complete the remaining sections.



- The Wheel Kit can only by used with table top sizes ranging from 24" x 40" to 30" x 60". Using a table top larger than what is recommended will void the warranty & may result in injury.
- When moving your table from one area to another, be sure that the base height is at the lowest position.



5.0 CUSTOMER SERVICE



Wheel Kit By MultiTable, LLC

2255 W. Desert Cove Ave, Suite E Phoenix, AZ 85029

602.773.6911 customerservice@multitable.com

www.MultiTable.com